

Historic, archived document



Do not assume content reflects current scientific knowledge, policies, or practices.





Repair Your **ELECTRIC CORDS**

... ATTACHING AN APPLIANCE PLUG

- Place the wire so rubber insulation comes just to the edge of the screw fastened to the metal clips.

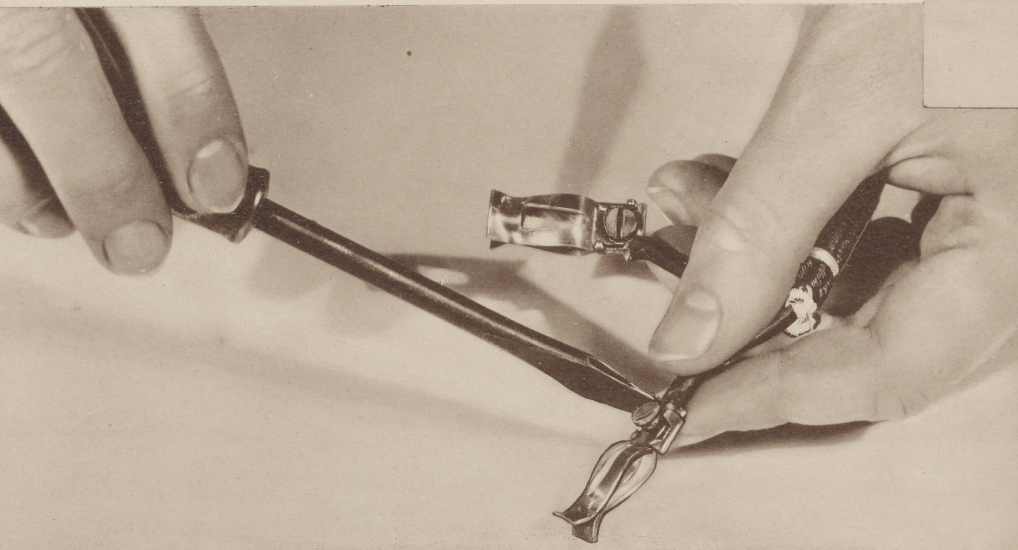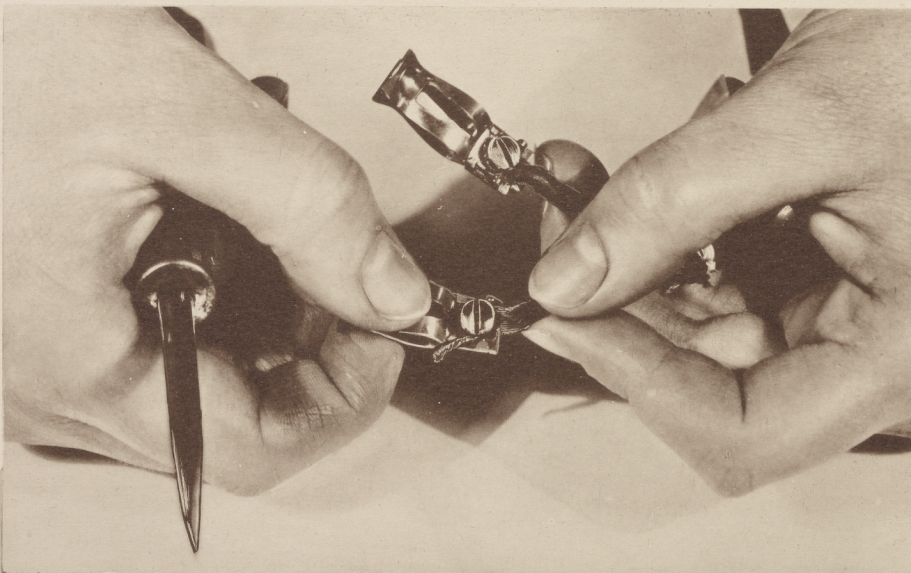

- Wrap wire once around the screw in the direction the screw turns. *Don't overlap wire.* Now tighten screw.

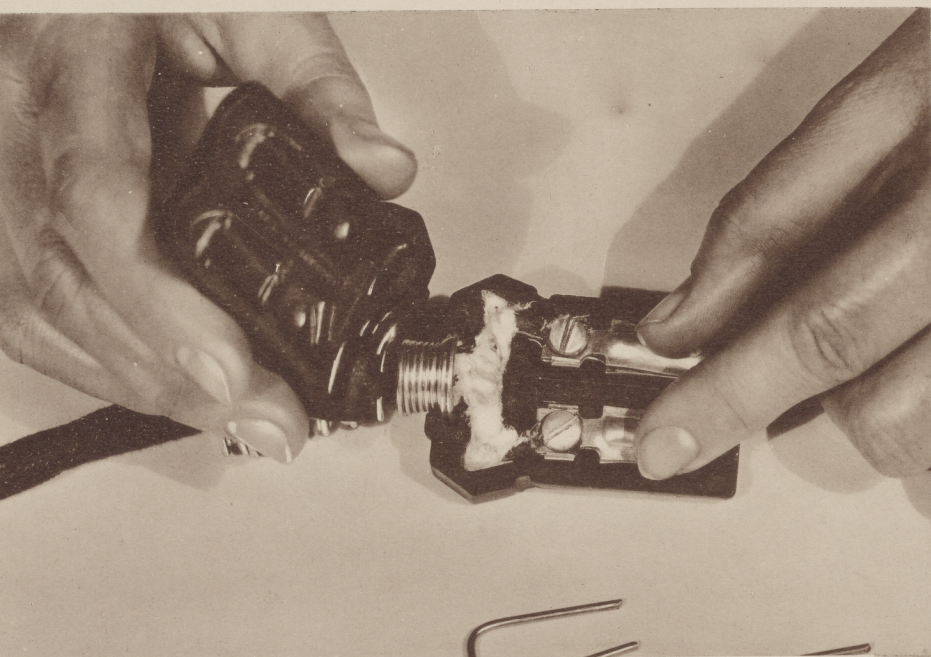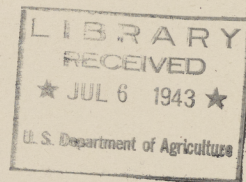

- Fit clips and rubber covered wires into the grooves. Insert end of coil protector in the groove provided for it. Pack asbestos tightly between wires at point of separation.

- Place the other half of the plug on top.... hold tight and fasten together.

